


24222, 24245 BASKETBALL TOWER INSTALLATION

1. LOCATION:- Determine Position - Refer to court size and line marking
2. FOOTING (HOLE) SIZE:- Depends on local conditions and is determined after soil testing has been completed. Consult your engineer. The following sizes are to be used as a guide only.

Normal: 600 x 600 x 1200mm Deep
 Very Hard & Rocky Ground: 400 x 400 x 1200mm Deep
 Soft, Sandy, Wet, Unstable: 1200 x 1200 x 1200mm Deep

3. Position post or post & sleeve in hole. Fit sleeve shroud over post & tape to post approx. 1m high, for slip ring. Ensure post is vertical & add concrete.
4. When concrete is cured, fit tower head (with slip ring). Assemble board, ring and starbracket together on the ground. Slide the assembly into tower head & lock up with 2 x 12mm fixing bolts. When satisfied board, post etc. is level, drill 12.5mm hole through star bracket & fit 12mm bolt and nylock nut.

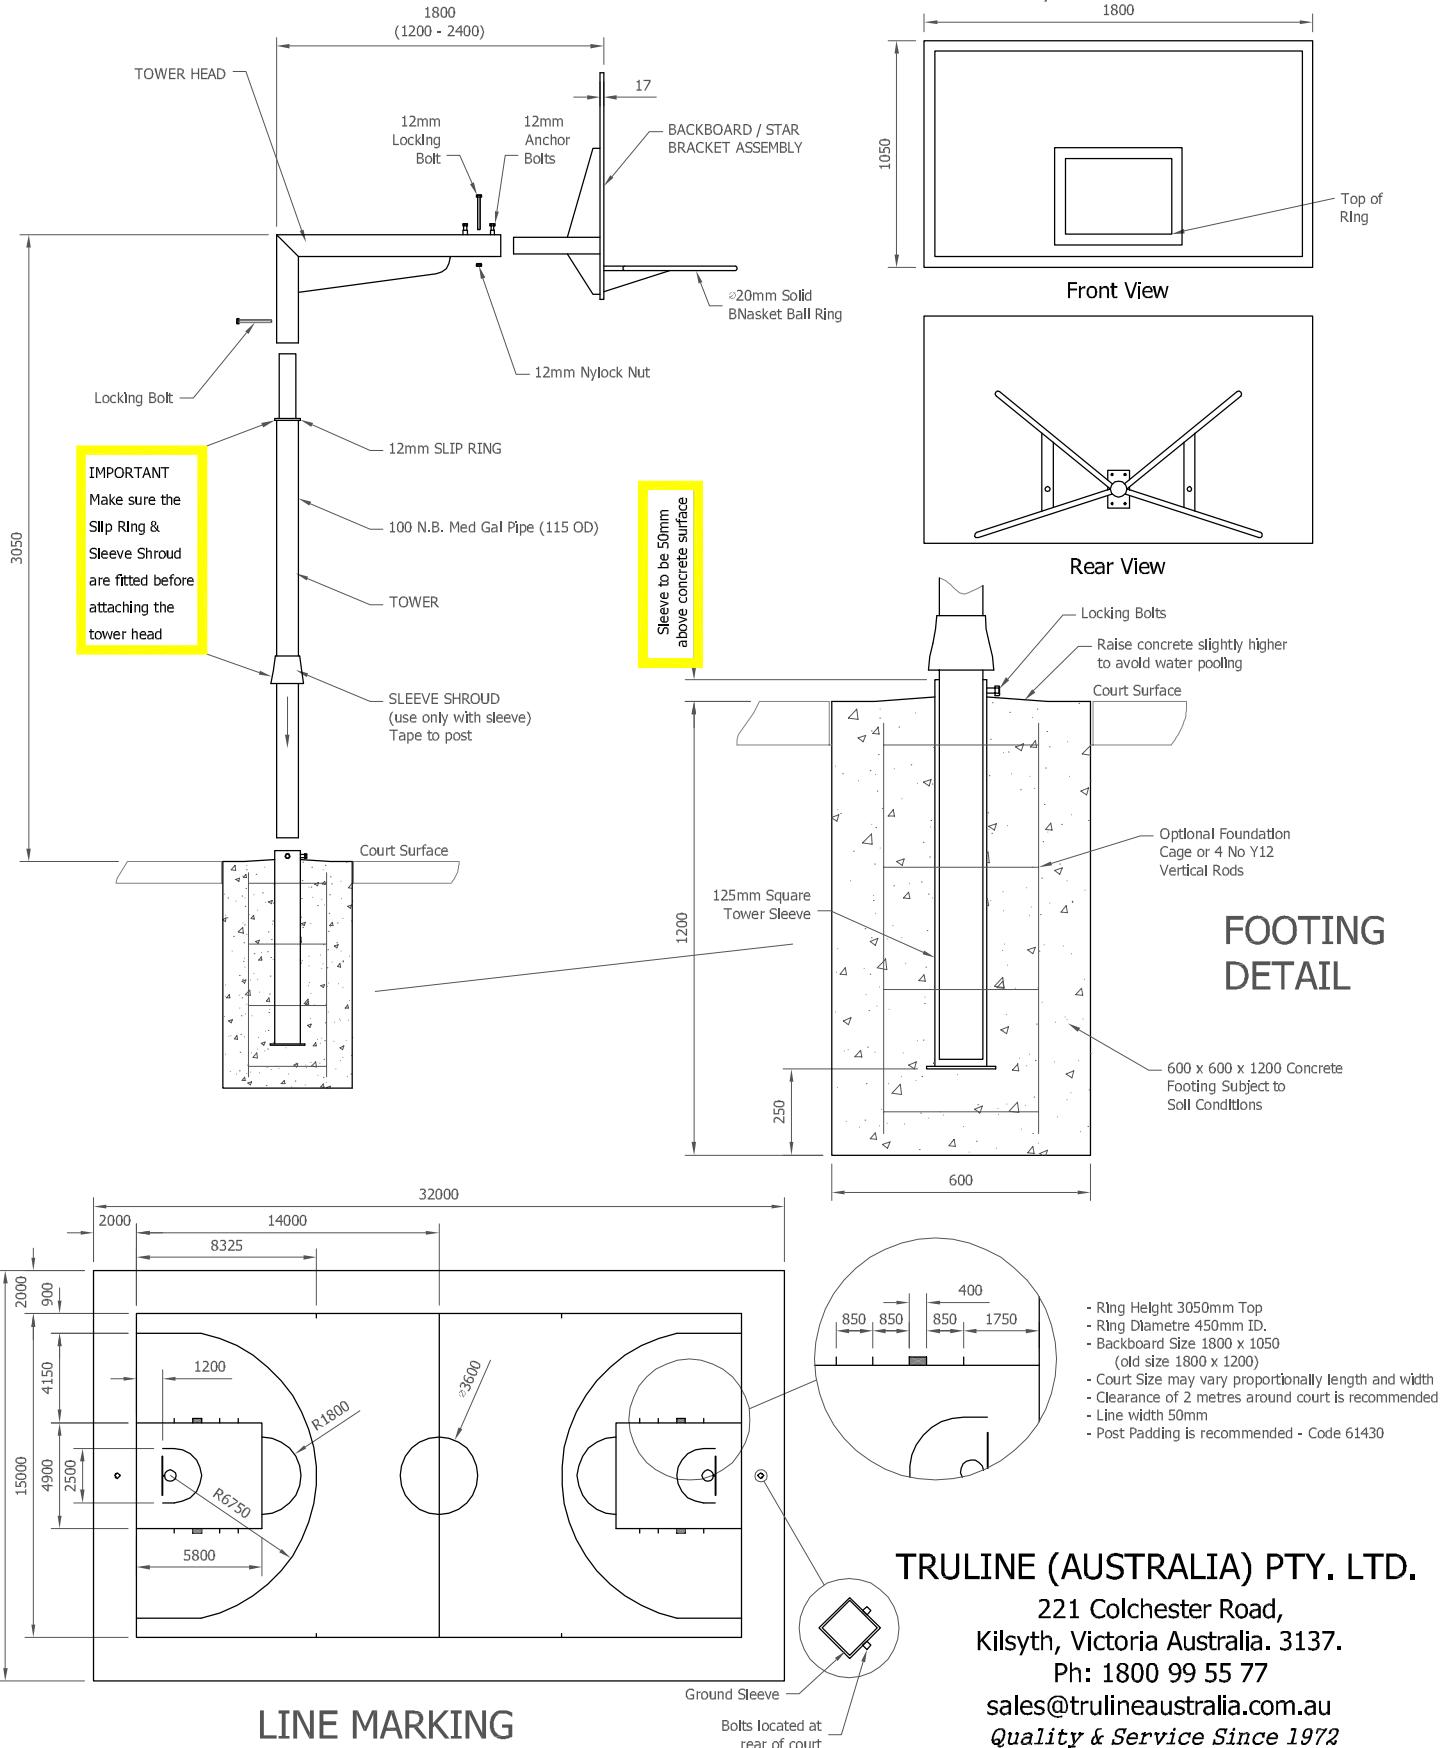

TRULINE (AUSTRALIA) PTY. LTD.
 221 Colchester Road,
 Kilsyth, Victoria Australia. 3137.
 Ph: 1800 99 55 77
sales@trulineaustralia.com.au
Quality & Service Since 1972