






Volleyball Post 94326 Sleeve / Hinged Cover 85431

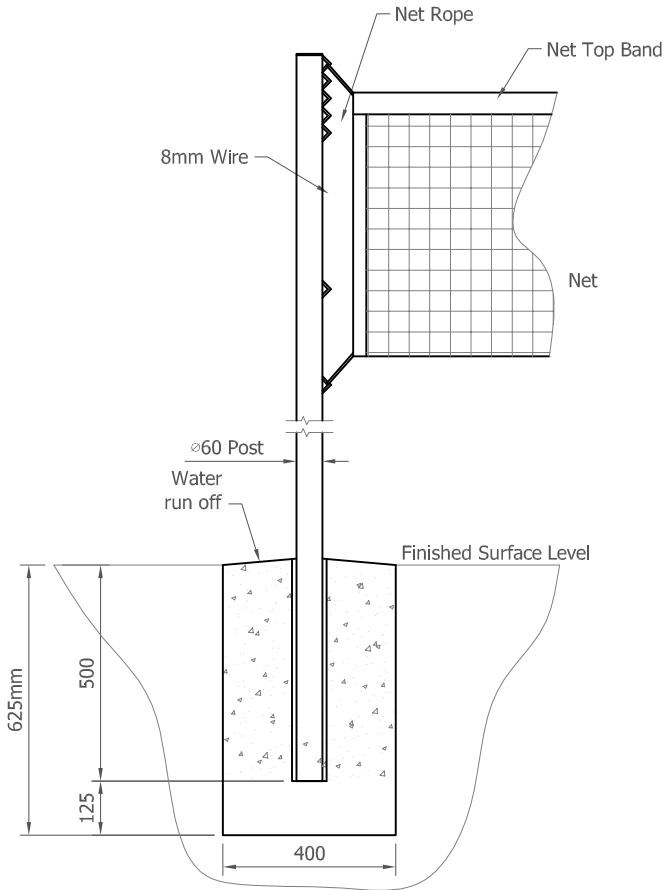

Installation Instructions

1. Location:- Determine position - Refer to court size and linemarking
2. Footing (hole) size:- Depends on local ground conditions & is determined after soil testing has been completed. Consult your engineer. The following sizes are to be used as a guide only.
NORMAL GROUND - 400 X 400 X 625 Deep.
3. Position sleeves/posts in hole. Pack with concrete, (25Mpa minimum - Rapid set can be very helpful) Ensure upright is vertical.

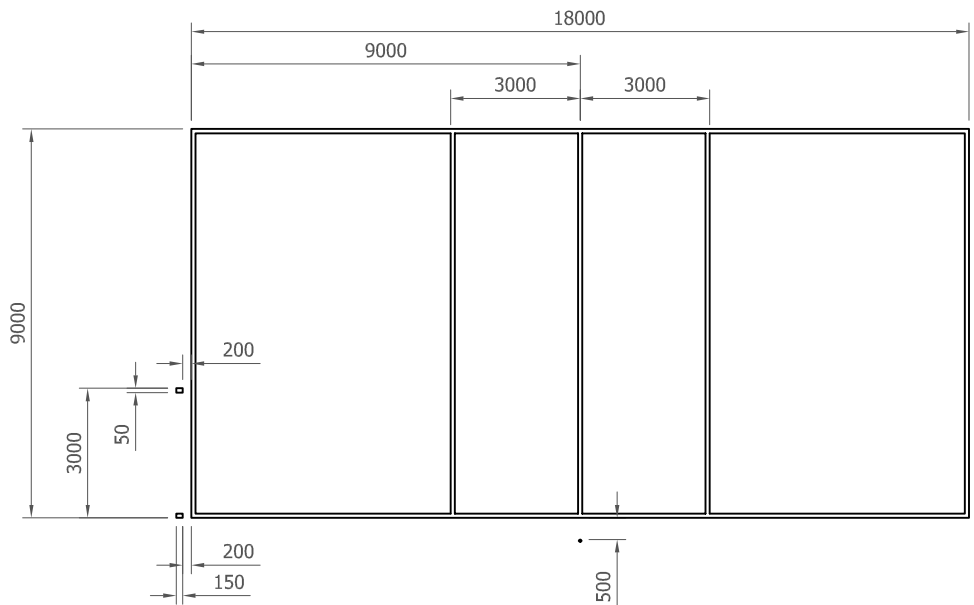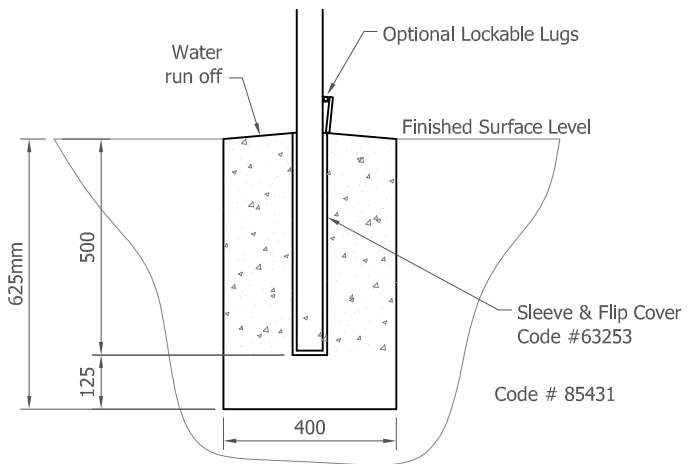

Court Layout

Net height at centre Mens 2430mm, Womens 2240mm
 Under 17 years Boys 2350mm, Girls 2150mm
 Under 15 years Boys 2240mm, Girls 2100mm
 Post should be 500mm from side lines (800mm acceptable)
 Clearance of 3000mm around the court is recommended
 Line width 50mm

TRULINE (AUSTRALIA) PTY. LTD.

221 Colchester Road,
Kilsyth, Victoria Australia. 3137.

Ph: 1800 99 55 77

sales@trulineaustralia.com.au

Quality & Service Since 1972